

Rotary actuator fail-safe for adjusting dampers in technical building installations

- Air damper size up to approx. 4 m²
- Torque motor 20 Nm
- Nominal voltage AC 24...240 V / DC 24...125 V
- Control Open/close
- with 2 integrated auxiliary switches



Technical data

| E | lectri | ادعا | Ы | at: |
|---|--------|------|---|-----|
| | ecu | La | u | au |

| Nominal voltage | AC 24240 V / DC 24125 V |
|-------------------------------------|-------------------------------------|
| Nominal voltage frequency | 50/60 Hz |
| Nominal voltage range | AC 19.2264 V / DC 21.6137.5 V |
| Power consumption in operation | 7 W |
| Power consumption in rest position | 3.5 W |
| Power consumption for wire sizing | 18 VA |
| Auxiliary switch | 2 x SPDT, 1 x 10% / 1 x 1190% |
| Switching capacity auxiliary switch | 1 mA3 A (0.5 A inductive), AC 250 V |
| Connection supply / control | Cable 1 m, 2 x 0.75 mm ² |
| Connection auxiliary switch | Cable 1 m, 6 x 0.75 mm ² |
| Parallel operation | Yes (note the performance data) |
| | |

Functional data

| Torque motor | 20 Nm |
|-------------------------------|---|
| Torque fail-safe | 20 Nm |
| Direction of motion motor | selectable by mounting L/R |
| Direction of motion fail-safe | selectable by mounting L/R |
| Manual override | by means of hand crank and locking switch |
| Angle of rotation | Max. 95° |
| Angle of rotation note | can be limited by adjustable mechanical end |
| | stop |
| Running time motor | 75 s / 90° |
| Running time fail-safe | <20 s @ -2050°C / <60 s @ -30°C |
| Sound power level, motor | 45 dB(A) |
| Mechanical interface | Universal shaft clamp 1025.4 mm |
| Position indication | Mechanical |
| Service life | Min. 60'000 fail-safe positions |
| Protection class IEC/EN | II, reinforced insulation |

Safety data

| | • |
|--|--|
| Protection class IEC/EN | II, reinforced insulation |
| Protection class UL | II, reinforced insulation |
| Protection class auxiliary switch IEC/EN | II, reinforced insulation |
| Degree of protection IEC/EN | IP54 |
| Degree of protection NEMA/UL | NEMA 2 |
| Enclosure | UL Enclosure Type 2 |
| EMC | CE according to 2014/30/EU |
| Low voltage directive | CE according to 2014/35/EU |
| Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| UL Approval | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on |
| | the production site, the device is UL-compliant |
| | in any case |
| Mode of operation | Type 1.AA.B |
| | |



| | Technical data sheet | | SFA-S2 |
|-------------|--|-----------------------------|--------|
| Safety data | Rated impulse voltage supply / control | 4 kV | |
| | Rated impulse voltage auxiliary switch | 2.5 kV | |
| | Pollution degree | 3 | |
| | Ambient humidity | Max. 95% RH, non-condensing | |
| | Ambient temperature | -3050°C [-22122°F] | |
| | Storage temperature | -4080°C [-40176°F] | |
| | Servicing | maintenance-free | |
| | | | |

Safety notes



Weight

Weight

 This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

2.3 kg

- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
 concerning the cross-section, the design, the installation situation and the ventilation
 conditions must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage
 or at safety extra-low voltage. The combination power supply voltage/safety extra-low voltage
 is not permitted.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation

The actuator is equipped with a universal power supply module that can utilise supply voltages of AC 24...240 V and DC 24...125V.

The actuator moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting

Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an antirotation device to prevent the actuator from rotating.

Manual override

By using the hand crank the damper can be actuated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Flexible signalling

The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch. They permit a 10% or 11...90% angle of rotation to be signaled.

Accessories

| Electrical accessories | Description | Туре |
|------------------------|------------------------------------|----------|
| | Auxiliary switch 2 x SPDT | S2A-F |
| | Feedback potentiometer 200 Ω | P200A-F |
| | Feedback potentiometer 1 $k\Omega$ | P1000A-F |



Technical data sheet SFA-S2

Mechanical accessories

| Description | Туре |
|---|------------|
| Shaft extension 240 mm Ø20 mm for damper shaft Ø 822.7 mm | AV8-25 |
| End stop indicator | IND-AFB |
| Shaft clamp reversible, for central mounting, for damper shafts Ø12.7 / | K7-2 |
| 19.0 / 25.4 mm | |
| Ball joint suitable for damper crank arm KH8 / KH10, Multipack 10 pcs. | KG10A |
| Ball joint suitable for damper crank arm KH8, Multipack 10 pcs. | KG8 |
| Damper crank arm Slot width 8.2 mm, clamping range Ø1018 mm | KH8 |
| Actuator arm, for 3/4" shafts, clamping range Ø1022 mm, Slot width 8.2 | KH-AFB |
| mm | |
| Form fit insert 10x10 mm, Multipack 20 pcs. | ZF10-NSA-F |
| Form fit insert 12x12 mm, Multipack 20 pcs. | ZF12-NSA-F |
| Form fit insert 15x15 mm, Multipack 20 pcs. | ZF15-NSA-F |
| Form fit insert 16x16 mm, Multipack 20 pcs. | ZF16-NSA-F |
| Mounting kit for linkage operation for flat and side installation | ZG-AFB |
| Base plate extension | Z-SF |
| Anti-rotation mechanism 230 mm, Multipack 20 pcs. | Z-ARS230L |
| Hand crank 63 mm | ZKN2-B |
| | |

Electrical installation




Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.

Wiring diagrams

AC 24...240 V / DC 24...125 V, open/close

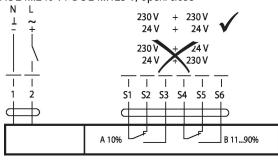

Cable colours:

1 = blue

2 = brown

S1 = violet

S2 = red

S3 = white


S4 = orange

S5 = pink

S6 = grey



Operating controls and indicators

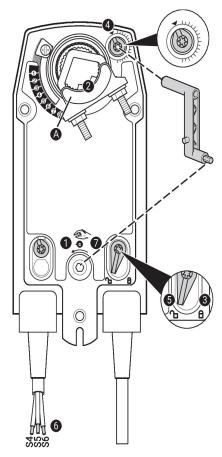

Auxiliary switch settings

1

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 2 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

Manual override


Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.


Dimensions

Spindle length

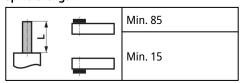

Clamping range

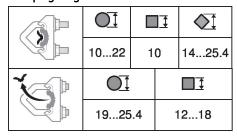

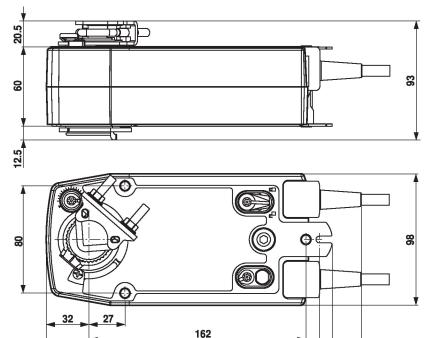

172 182 236