

Rotary actuator for ball valves

- Torque motor 2 Nm
- Nominal voltage AC 230 V
- Control Open/close, 3-point






Technical data

Electrical data	Nominal voltage	AC 230 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 207253 V
	Power consumption in operation	1.5 W
	Power consumption for wire sizing	2.5 VA
	Connection supply / control	Cable 1 m, 3 x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	2 Nm
	Manual override	with hand crank
	Running time motor	35 s / 90°
	Sound power level, motor	45 dB(A)
	Position indication	Mechanical
Safety	Protection class IEC/EN	Il reinforced insulation
	Degree of protection IEC/EN	IP40
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Mode of operation	Type 1
	Rated impulse voltage supply / control	4 kV
	Control pollution degree	3
	Ambient temperature	-750°C
	Storage temperature	-4080°C
	Ambient humidity	Max. 95% r.H., non-condensing
	Servicing	maintenance-free
Weight	Weight	0.26 kg




Safety notes			
$\underline{\wedge}$	 This device has been designed for use in stationary heating, ventilation and air- conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport. 		
	 Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet. 		
	Caution: Power supply voltage!		
	 Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation. 		
	 The actuator is to be protected against moisture. It is not suitable for outdoor applications. 		
	 The correct functioning of the strain relief for the cable in the actuator housing is to be checked. 		
	The installer must check for correct principle of operation after installation.		
	 The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user. 		
	 The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed. 		
Product features			
Simple direct mounting	Simple direct mounting on the ball valve with only one screw. The mounting orientation in relation to the ball valve can be selected in 90° steps.		
Manual override	Manual override possible with lever (the gearing is disengaged as long as the self-resetting lever is pressed).		
Combination valve/actuator	Refer to the valve documentation for suitable valves, their permitted fluid temperatures and closing pressures.		

Electrical installation




Wiring diagrams

AC 230 V, open/close



Cable colours: 1 = blue 2 = brown 3 = white AC 230 V, 3-point



Cable colours:


1 = blue 2 = brown

3 = white



Dimensions [mm]

Dimensional drawings

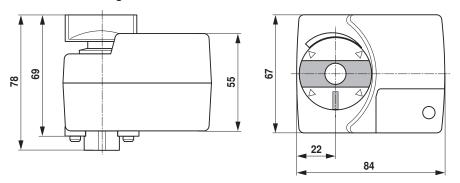

Further documentation

- The complete product range for water applicationsData sheets for ball valves
- · Installation instructions for actuators and/or ball valves
- · General notes for project planning