

Technical data sheet

Rotary actuator for butterfly valves

- Torque motor Max. 90 Nm (not constant)
- Nominal voltage AC 100...240 V
- Control Open/close



Technical data

Electrical data	Nominal voltage	AC 100240 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 85265 V
	Power consumption in operation	5 W
	Power consumption in rest position	2 W
	Power consumption for wire sizing	9 VA
	Connection supply / control	Cable 1 m, 3 x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	Max. 90 Nm (not constant)
	Manual override	with push-button, can be locked
	Running time motor	150 s / 90°
	Sound power level, motor	45 dB(A)
	Position indication	Mechanically (integrated)
Safety data	Protection class IEC/EN	II, reinforced insulation
	Protection class UL	II, reinforced insulation
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	UL Approval	cULus according to UL60730-1A, UL60730-2-14
		and CAN/CSA E60730-1
		The UL marking on the actuator depends on the production site, the device is UL-compliant
		in any case
	Mode of operation	Туре 1
	Rated impulse voltage supply / control	2.5 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free
Mechanical data	Connection flange	F07
Weight	Weight	3.8 kg



Technical data sheet

Ĺ	 This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport. Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time. Caution: Power supply voltage! Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation. The switch for changing the direction of rotation may not be adjusted. The angle of rotation is not permitted to be subjected to mechanical limitation. It is forbidden to alter the mechanical end stops. The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user. Cables must not be removed from the device. The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed. Because of its non-constant torque, the actuator is neither suitable nor released for motorisation with valves from other manufacturers. No legal entitlement can be claimed, even
	after extensive testing. Belimo will not be held liable and will provide no warranty.
Product features	
Simple direct mounting	Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments.
Manual override	Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).
High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
Torque not constant	Due to the non-linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures.

Accessories

Electrical accessor


Туре S1A
P140A
P200A
P500A
P1000A
P2800A
P5000A
P10000A

90







Caution: Power supply voltage!

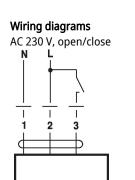

Cable colours: 1 = blue 2 = brown 3 = white

Dimensions

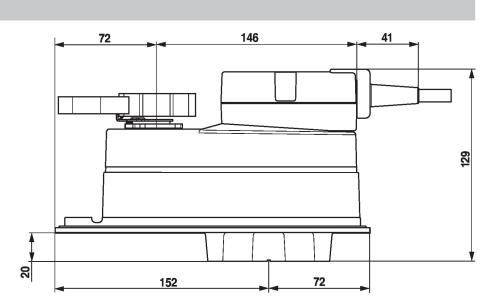

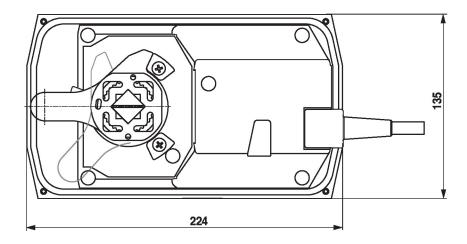

Further documentation

- The complete product range for water applications
- Data sheets for butterfly valves
- Installation instructions for actuators and/or butterfly valves
- General notes for project planning